# EN Installation Manual SR2PB



#### Warning!


High voltage. Risk of electric shock. Installation should only be performed by a qualified electrician. Ensure that the power supply is turned off to the sensor before connecting.



Sensor V-sense SR2PB is a passive Casambi-Ready PIR sensor (infrared presence sensor) with a built-in lux meter, relay output, and two push-button inputs.

SR2PB can break non-dimmable loads up to 10A ( $\cos \varphi$  =1).

# Detection pattern (m)

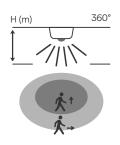

	<b>Å</b> → Rörelse tvärs mot	Rörelse rakt mot	Stilla arbete
Höjd (m)	Tvärs (m)	Rakt (m)	Stilla (m)
2,4	Ø 12	Ø6	04
2,8	Ø 14	Ø 7,5	Ø 4
3,2	Ø 16	Ø9	Ø4
3,6	Ø 18	Ø 10	Ø4
4	Ø 20	Ø 11,5	Rekommend- eras ej
5	Ø 25	Ø 14,5	Rekommend- eras ej


• In accordance with IFC 63180

#### Installation

This unit is designed to be mounted in the ceiling.


- Do not place the unit where direct sunlight can reach the sensor.
- Do not place the sensor within 1 meter of lighting, forced air heating, or ventilation.
- Do not attach the sensor to an unstable or vibrating surface.
- Movement is best detected when the ambient temperature differs from the human body's temperature, therefore use within -20 to 35°C for ambient temperature.
- For stationary work, installation directly above the workplace is recommended.

#### Recommendations for hole cutting

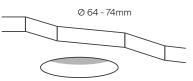

Hole cutting over 70mm requires sharp edges to prevent the hole from being visible


Depending on the thickness of the ceiling, the position of the springs on the sensor can be moved to ensure optimal mounting.

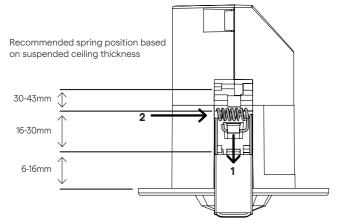

#### Changing the spring position

- 1. Remove the spring bend from the plastic hook by pressing it down.
- 2. Compress the spring from the right side and remove it from the left plastic peg.
- 3. For reassembly of the spring, perform steps 1 & 2 in reverse order.


### Recommendations for cable stripping

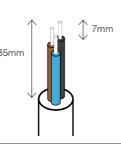

# Wiring diagram


The X-terminal is intended as a crossover terminal.

Tip! Since the terminal is removable, it can be detached to easily connect the wiring separately from the sensor, and when everything is connected, the terminal can be pressed back into place in the sensor.

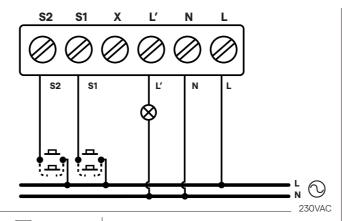


# Mounting & strain relief (for recessed mounting of the sensor)

1. Press the plastic part according to the picture until

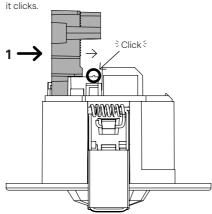


2. Press the plastic part according to the picture until it clicks. Ensure that the plastic hook circled in the picture slides into the pocket on the plastic part.

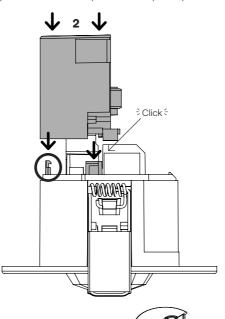


Tip! Use the included cable ties to organize the cables. This is done by inserting the cable tie into one end of the holes so it comes out on the other side.



Set the strain relief bracket in the correct direction so it grips the cable dimension you are using.

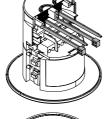


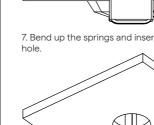


#### 4 .Press out the appropriate hole diameter (pre-punched @12 &


Tip! When installing with flex tube, use a pipe coupling to ensure that the flexible conduit is held

016mm) for the cable.

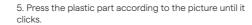


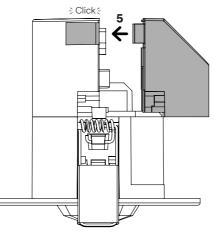


6. Check that all parts are properly assembled and no gaps are visible. Otherwise, press on the affected parts as needed.

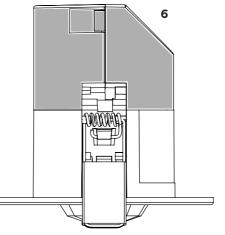


7. Bend up the springs and insert the sensor through the

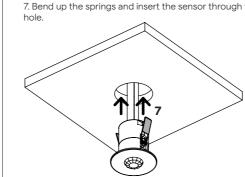

# Dimensions (mm)

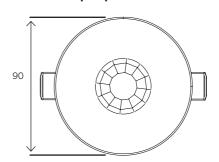

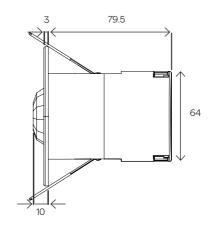

#### Changing profile

You can change the profile of the sensor by clicking on the unit in the Casambi app under "Nearby devices". The option "Change profile" will then appear.

#### Profiles:

SR2PB: Standard profile

SR2PB No Push-buttons: No push-buttons activated

SR2PB No Relay: No relay output activated

SR2PB Only Sensor: No relay and push-buttons activated

#### Load

The breaking capacity of 10A applies to resistive load. Different types of loads have different amounts of inrush current at startup and voltage spikes at shutdown To maximize the lifespan of SR2PB, the following values in the table below are recommended (provided the installation environment is not too warm)

Last	PF	Effekt	VA	Ström
Resistiv last (resistiv värmare)	1	2300W	2300VA	10A
Halogen/glödljus 230V	1	1800W	1800VA	7,8A
LED-laster	0,9	500W	615VA	2,5A
Lysrör, okompenserade	0,3	430W	1430VA	6,25A
Lysrör, kompenserade	0,85	935W	1085VA	5A
Lågvoltshalogen, elektronisk	0,8	935W	1085VA	5A
Lågvoltshalogen, konventionell	0,95	740W	740VA	3A
Lågenergilampor	0,6	300W	500VA	2,5A
Motorer och fläktar	0,7	380W	575VA	2,5A

#### Heat

SR2PB is equipped with overheating protection. During longer continuous operation with high load in a warm environment, the sensor will shut off. If the sensor is installed in a warm environment, the relay cannot be loaded to the maximum. Note that long cable lengths will generate more heat due to the cable's resistance.

#### Range

By using MESH network technology, you only need to be within range (max 30 meters) of one device to control all devices. MESH technology allows you to build large-scale installations with a large number of fixtures and easily control them through, for example, your smartphone. We recommend 10 meters as all installations have different conditions

Effective range is strongly dependent on the environment and obstacles, such as walls and building materials

Metal will significantly block the radio signal, so avoid enclosing in metal or placing the unit near large metal structures.

Note that even a Casambi device without load can be used in the network to strengthen network strength through MESH technology.

Designation	SR2PB		
Model series	V-sense		
Article number	V-44B0306-036Y		
E-number	13 020 57		
Voltage in	220-240VAC		
Frequency in	50Hz, 60Hz		
Radio frequencies	2402MHz-2480MHz		
Maximum radio frequency effect	8dBm		
Standby effect	<0.5W		
Lux range	1-999lux		
Number of push-button inputs	2		
Maximum breaking capacity	10A (cos =1)		
Maximum inrush current relay output	130A, 10ms		
Memorizes last set position	Yes		
Overheating protection	Yes		
Mounting	Recessed (surface mounting achieved with accessories sold separately)		
Working air humidity	080%, non-condensing		
Working temperature	-20°C - +35°C		
Dimensions (WxH)	90×81mm		
Weight	124g		
Cable area	1-2.5mm² (28~12AWG)		
Cable outer diameter	7mm-13mm		
Housing material	PC/ABS		
Insulation class	IP20		
Enclosure class	II		
Approvals	CE, UKCA		






# Installation Manual S20BOX

The S20BOX enables surface-mounted installation of the V-sense SRD2PB and V-sense SR2PB sensors.

# Installation procedure


# **Disassembling the Spring**


- 1. Remove the spring bend from the plastic hook by pressing it downward.
- 2. Compress the spring from the right side and detach it from the left plastic pin.

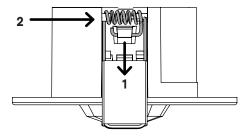


#### Mount the Mounting Plate in the Ceiling

Tip! The holes are compatible with ceiling and wall mount junction boxes.

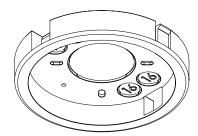


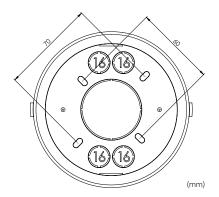


# Cut out opening for cable

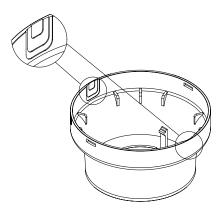


#### Press the sensor into the box

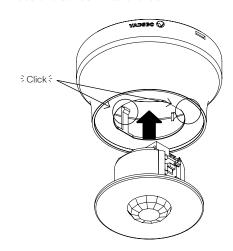


# Press the box against the base plate

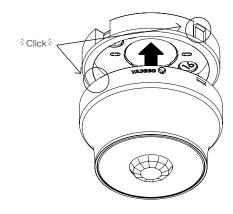

# **Dimensions (mm)**

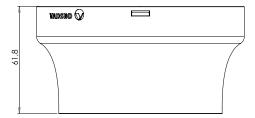

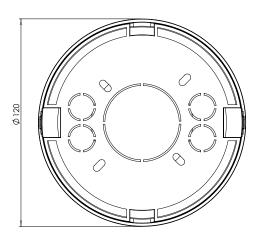

#### **Technical Data**

Designation	S20BOX		
Model series	V-sense		
Article number	V-65F1202-001N		
E-number	14 387 01		
Mounting	Surface-mounted		
Material	PC		
Insulation class	IP20		
Color	RAL9003		
Dimensions (W x H)	120 x 61.8 mm		
Cable entry	Cut-outs for 7mm, 13mm, and 16mm 16mm knock-outs for flexible conduit 45mm knock-out for junction box		
Ambient temperature	-20 to +35°C		
Weight	102g		
Flame retardancy	V-0		
Approvals	CE		

